

User Manual

InteracTable



Before operating the unit, please read this manual thoroughly, and retain it for future reference.



Table of Contents

Notice	3
Important Safety Instructions	4
Quick Start Guide	5
Input / Output Port Descriptions (40" and larger)	6
Mechanical Layout	7
Front LED Operations	7
Remote Control Key	8
Menu Overview	9
Luminance > Brightness	9
Luminance > Contrast	9
Luminance > Dim Control	10
Luminance > Main SR (Sharpness)	11
Color	11
OSD Settings	12
Setup > Language	12
Setup > Mute	13
Setup > Input	13
Setup > Display Size	13
Setup > Reset	14
Setup > DP Speed	14
Setup > Audio Src.	14

Notice

1. When disconnecting the display from an electrical outlet, the plug must be pulled out from the socket. Do not remove power cord from outlet by pulling from the cord. Pull from the plug head.
2. WARNING – To reduce the risk of fire or electric shock, do not expose this appliance to rain or other forms of moisture.
3. Display must not be exposed to liquids via dripping or splashing. Please do not place liquid-filled items such as vases near the display.
4. Use only a properly grounded plug and receptacle.
5. CAUTION – These instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any service other than that contained in the operating instructions unless you are qualified to do so.

***This product can be changed to improve performance without notification.**

	<div style="background-color: black; color: white; padding: 5px; margin-bottom: 5px;">CAUTION</div> <div style="background-color: #cccccc; padding: 5px;">RISK OF ELECTRIC SHOCK DO NOT OPEN</div>	
<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



This symbol is intended to alert the user to the presence of insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Important Safety Instructions



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with dry microfiber cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other display (including amplifiers) that produce heat.
9. Do not remove ground prong from three-pronged plugs. If your outlet will not accept three-pronged plugs, consult an electrician for replacement.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the display.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the display. When a cart is used, exercise caution when moving the cart/display combination to avoid injury from tip-over.
13. Unplug this display during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the display has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the display, the display has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this display to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the display.
16. To completely disconnect this display from the wall outlet, disconnect the power supply cord plug from the AC receptacle/wall socket.
17. The mains plug of the power supply cord shall remain readily operable.
18. An display with CLASS I construction shall be connected to a wall socket outlet with a protective grounding connection.
19. Note: Prolonged use of headphones at a high volume may cause damage your ears.
20. Notice to users : This is a Class A digital device
21. This device is designed for commercial use and features safety certificates for electromagnetic interference (EMI). Users should be mindful of EMI issues.

Quick Start Guide

Note: Designs such as the "Lobby" and "Flow-Thru" will have different cabinet appearance to those shown in these figures. Philips-head screws or thumbscrews may be required to gain access.

After removing the table from its packaging, open the cabinet by pushing the key button and pulling outward.

The interior of the cabinetry is shown in fig.1. There is an access hole at the bottom of the cabinet, through which cabling can be run. The power cable for the touch screen must be plugged either into the outlet shown above or directly to an outlet below the table.



Fig. 1

Fig. 2 is a view of the cables in the cabinet. The HDMI cable feeding the touch screen is shown being held by a technician, while the USB is circled in red. The USB must be connected to your source device in order for touch functionality to work.



Fig. 2

If the touch screen's power cable is plugged into the outlet provided, you will then need to connect a power cable to the exterior outlet, circled in fig. 3. You will need to turn the power switch located next to the exterior outlet on after connecting your source device.



Fig. 3

Input / Output Port Descriptions (40" and larger)

Items		Specifications
Supported Signal Connection	HDMI 1	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
	HDMI 2	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
	HDMI 3	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
	DP1 1.2a	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
	DP2 1.2a	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
	DP Out 1.2a	H Frequency Range : 20 ~ 82kHz
		V Frequency Range : 55 ~ 75kHz
		Maximum resolution : 3840x2160@60Hz
		Maximum pixel rate : 594 MHz
Input Connection	HDMI	3
	DP	2
	Comport (RS232C)	1 / 9 Pin Female Type
Output Connection	DP	1
	Comport (RS232C)	1/ 9 Pin Male Type

Remote Control Key



1. SOURCE : Selects Input Source
2. POWER : Turns the LCD Display On and Off
3. UP : Controls the UP cursor in the menu
4. LEFT : Controls the LEFT cursor in the menu
5. RIGHT : Controls the RIGHT cursor in the menu
6. ENTER : Controls the ENTER cursor in the menu
7. DOWN : Controls the DOWN cursor in the menu
8. MENU : Displays the main On-Screen menu
9. EXIT : Exit the On-Screen menu


Menu Overview

Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings. If you press the **MENU** button, up to the third level of the menu system will appear on the monitor screen. The fourth level can be displayed by pressing the **OK** button

- ◊ To show and remove the Menu:
Press the **MENU** button on the Remote Control to display the menu. A second press of the **MENU** button or a press of the **EXIT** button will take you back to monitor viewing.
- ◊ To go to the next level:
Press **OK** (or Right arrow button) on the Remote Control.
- ◊ To go back to the previous level:
Press **MENU** (or Left arrow button) on the Remote Control.
- ◊ To go to the next menu:
Press **Down arrow** button on the Remote Control.
- ◊ To go to the previous menu:
Press **Up arrow** button on the Remote Control


Luminance > Brightness

1. Press the [MENU] button.
2. Press the [Enter] button to move to the "Luminance" menu.
3. Press the [Enter] button to move to "Brightness", and then press the [Enter] button.
4. Press the ←/→ button to adjust the value and press the [Enter] button.
5. Press the [EXIT] button to exit the OSD menu.

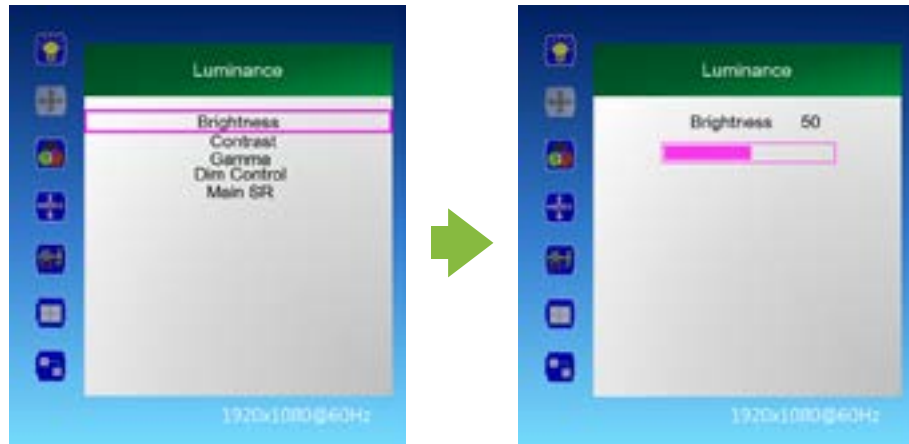

Luminance > Contrast

1. Press the [MENU] button.
2. Press the [Enter] button to move to the "Luminance" menu.
3. Press the ↑/↓ button to move to "Contrast" and press the [Enter] button.
4. Press the ←/→ button to adjust the value and press the [Enter] button.
5. Press the [EXIT] button to exit the OSD menu.

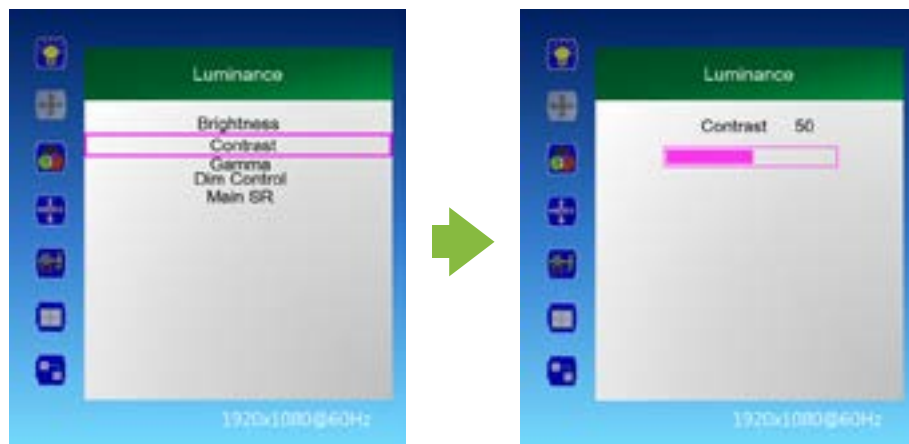

Menu Overview, cont.

Luminance > Dim Control



1. Press the [MENU] button.
2. Press the [Enter] button to move to "Dim Control" and press the [Enter] button.
3. Dim Control Setting: On - Off
 - a. Press ↑ / ↓ button to go to "Auto Dimming".
 - b. Press ← / → button to adjust to desired setting value and press [Enter] button.
 - On: automatically adjusts the Dim level according to the measured value of the optional LUX sensor.
 - Off: AUTO Dimming operation Off
4. Monitor displays the current dimming value
 "Dimming": Display the current dimming value of the monitor (can be adjusted when Auto Dimming Off)
5. Maximum ambient brightness setting
 - a. Press ↑ / ↓ button to move to "Max Ambient"
 - b. Press ← / → button to adjust to desired setting value and press [Enter] button.
6. Minimum ambient brightness setting
 - a. Press ↑ / ↓ button to move to "Min Ambient".
 - b. Press ← / → button to adjust to desired setting value and press [Enter] button.
7. LUX sensor measurement display
 "Current LUX": Displays the measured brightness of the LUX sensor (if used).
8. Press the [EXIT] button to exit the OSD menu.

Ex) Auto Dimming Setting: On Setting

Max Ambient : 400 settings

Min Ambient : 100

Current LUX 100 or less : Minimum Brightness,

Current LUX 400 or higher: Maximum Brightness

Current Lux 300 : Display brightness proportional to the ratio between 100 and 400

Menu Overview, cont.

Luminance > Main SR (Sharpness)

1. Press the [MENU] button.
2. Press the [Enter] button to move to the "Luminance" menu.
3. Press the ↑ / ↓ button to move to "Main SR" and press the [Enter] button.
4. Press the ↑ / ↓ buttons to select the desired setting, then press the [Enter] button.



Color

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the "Color" menu.
3. Press the [Enter] button to move to "Color Temperature", and then press the [Enter] button.
4. Press the ↑ / ↓ button to select the desired screen mode and then press the [Enter] button.
5000K, 6500K, 7500K, 8200K, 9300K, 11500K, sRGB, User Define
 - a. When "User Define" mode is selected, Red, Green, Blue can be adjusted to the desired setting value.
 - b. Press ← / → button to adjust to the desired setting value and press [Enter] button.
5. Press the [EXIT] button to exit the OSD menu.



Menu Overview, cont.

OSD Settings

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “OSD Settings” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to the desired menu and press the [Enter] button.
4. Press the ← / → button to adjust the value and press the [Enter] button.
 - Horizontal: Adjust the position of the OSD menu screen to the left and right.
 - Vertical: Adjusts the position of the OSD menu screen up and down.
 - Transparency: OSD menu screen transparency adjustment.
 - OSD Time Out: OSD menu screen hold time.
5. Press the [EXIT] button to exit the OSD menu



Setup > Language

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “Language” and press the [Enter] button.
4. Press the ↑ / ↓ button to select the desired language.
5. Press the [EXIT] button to exit the OSD menu.



Menu Overview, cont.

Setup > Mute

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “Mute” and press the [Enter] button.
4. Press the ↑ / ↓ buttons to select the desired setting, then press the [Enter] button.
Off, On
5. Press the [EXIT] button to exit the OSD menu.



Setup > Input

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “Input” and press the [Enter] button.
4. Press the ↑ / ↓ button to select the desired input signal and press the [Enter] button.
HDMI 1, HDMI 2, HDMI 3, DP 1, DP 2
5. Press the [EXIT] button to exit the OSD menu



Setup > Display Size

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button
3. Press the ↑ / ↓ button to move to “Display Size” and press the [Enter] button.
4. Press the ↑ / ↓ button to select the desired screen size and then press the [Enter] button.
Smart Screen, Smart Fit, 4: 3, Smart 4: 3, 1: 1, Smart View
5. Press the [EXIT] button to exit the OSD menu.



Menu Overview, cont.

Setup > Reset *(restores settings to factory default)*

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “Reset” and press the [Enter] button.
4. Press the ↑ / ↓ buttons to select the desired setting, then press the [Enter] button. No, Yes
5. Press the [EXIT] button to exit the OSD menu



Setup > DP Speed

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “DP Speed” and press the [Enter] button.
4. Press the ↑ / ↓ buttons to select the desired setting, then press the [Enter] button. 2.7G, 5.4G
5. Press the [EXIT] button to exit the OSD menu.
Note: Set to 5.4G when 4k/60Hz signal is daisy-chained, 2.7G when other signals are used.



Setup > Audio Src.

1. Press the [MENU] button.
2. Press the ↑ / ↓ button to move to the “Setup” menu and press the [Enter] button.
3. Press the ↑ / ↓ button to move to “Audio Src” and press the [Enter] button.
4. Press the ↑ / ↓ buttons to select the desired setting, then press the [Enter] button.
HDMI 1, HDMI 2, HDMI 3, DP 1, DP 2
5. Press the [EXIT] button to exit the OSD menu.

